


SC550 – Use and Maintenance


ATTENTION! Do not use the machine before you have read and understood the User Manual



1. Disconnect the battery charger cable from the electrical socket. Then place the cable into the cable box.

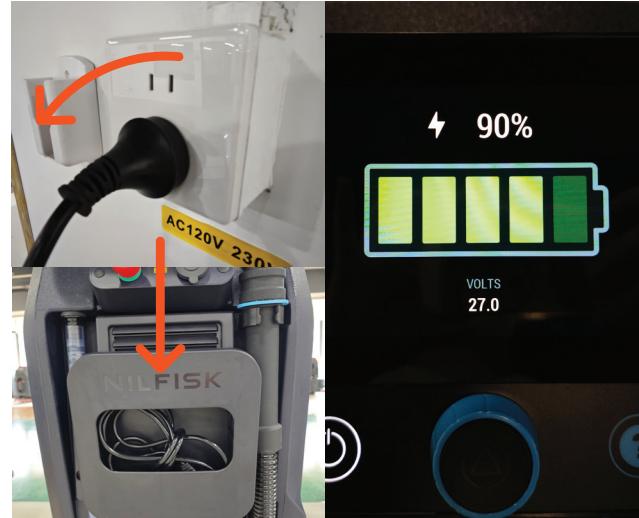

2. Fill the tank with a clean water. The clean water temperature must not exceed 40 °C. Make sure the solution valve under the machine is open.

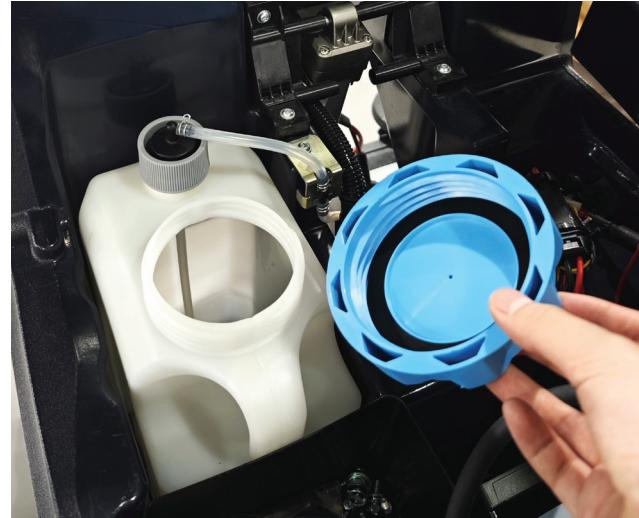

3. Fill the EcoFlex™ tank with a detergent suitable for cleaning machines (highly concentrated and low foaming detergent).



4. Install the squeegee and fasten it with the knob.



5. Place the brush or the pad-holder under the deck. Use the appropriate brush to clean the floor.




6. Power on, then enter your password to engage the brush. Please turn the knob to brush control, then click the attach brush button.




7. Lower the squeegee with the pedal.




8. Push forward the drive paddle to start cleaning. Adjust maximum speed by the speed control knob.

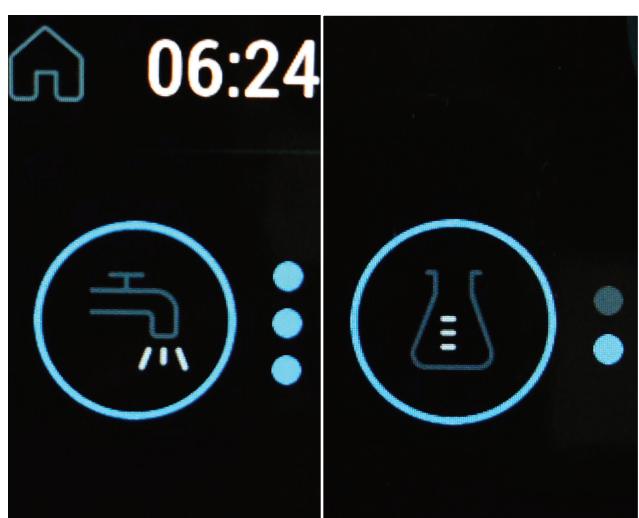


9. To change the solution flow level push the solution button and change flow level according to the cleaning performance and application. (Only setting in manual mode).

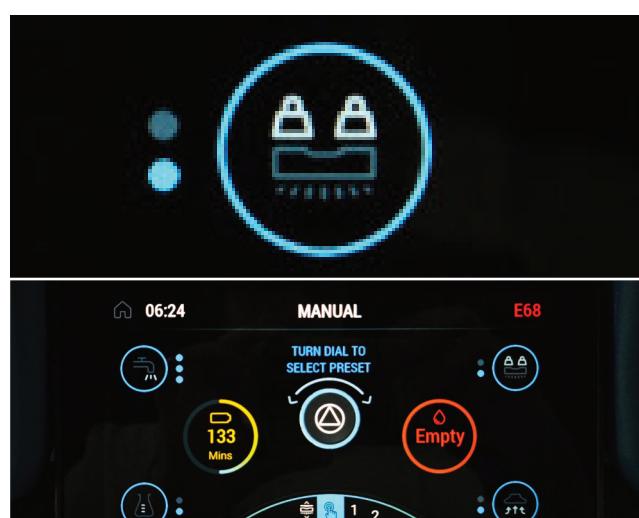

10. If necessary press the extra pressure function. (Only setting in manual mode).

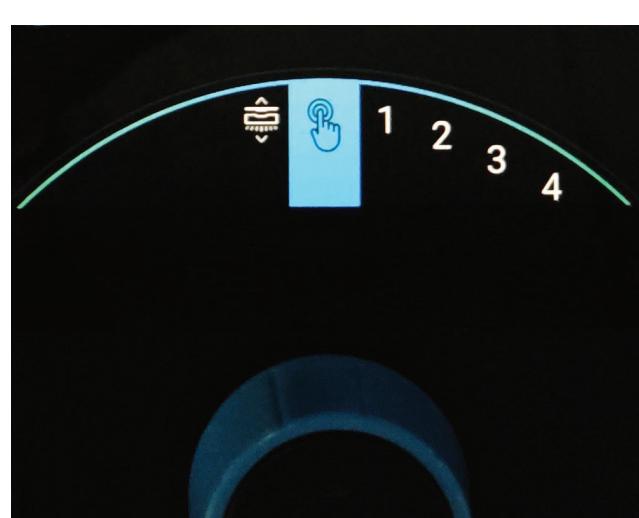

11. There are 6 modules for knob selection; the first one is set up and down the brush; the second is manual control; and the last four are preset cleaning models.

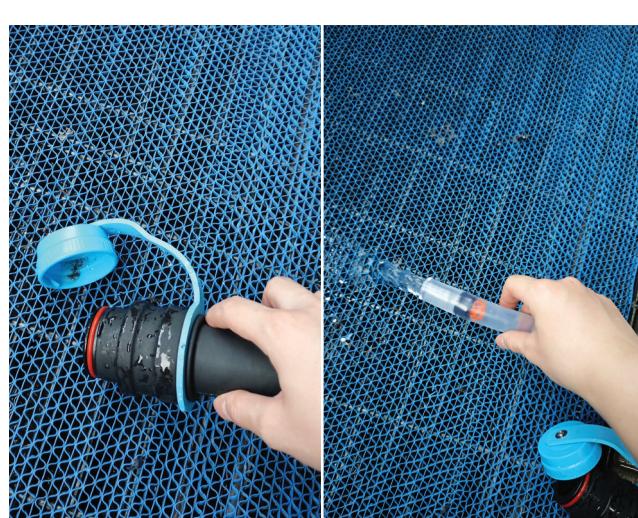

12. Empty the recovery tank with the hose. Then empty the solution tank with the transparent hose.



13. Empty the debris tray and clean/wash the recovery tank inside.



14. Clean the filter:
A) Close the solution valve under the machine.
B) Remove the blue cover and the gasket, then remove and clean the filter inside.
C) Reassemble the filter.



15. Press the RELEASE BRUSH button and wait for the brush/pad holder to fall on the floor. Remove to clean or change brush.




16. Take the squeegee off and remove debris. Check and clean the squeegee blades.



17. Clean the squeegee and then hang it up for storage.



18. Clean the machine using a damp cloth and where needed use a neutral cleaning product.

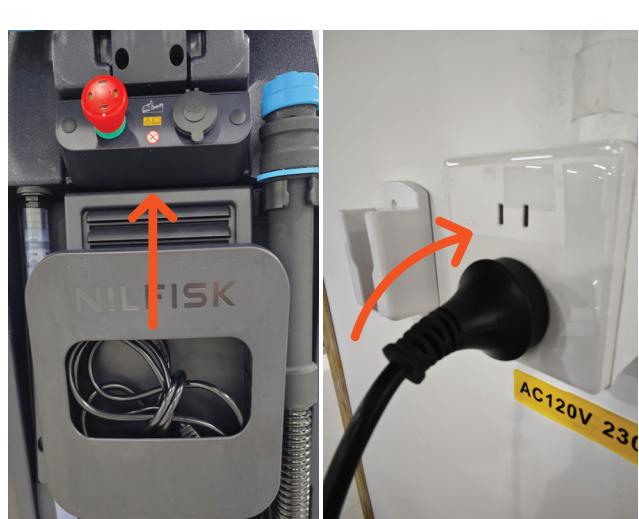

19. Charge the batteries: Take the cable out of the cable box, and connect the battery charger cable to the electrical socket.



20. Park the machine with the recovery tank cover open.

If the machine has been used until the Red light illuminates on the battery level indicator on the machine, a full recharge of the batteries (It takes about 3h to fill 50Ah. Hours Notes: The time varies according to the battery capacity) will be required. Failure to carry out this procedure may cause damage to the batteries. Charging the batteries after every use is recommended.

PLEASE ENSURE THE CHARGER IS ALWAYS CONNECTED TO THE BATTERIES EVEN IF NOT USED FOR LONGER PERIOD OF TIME TO PREVENT DAMAGE TO THE BATTERY DUE TO LOW VOLTAGE

SC550 – Troubleshooting

ATTENTION! Do not use the machine before you have read and understood the User Manual

The machine doesn't work as it should?




1. Check whether the EMERGENCY MUSHROOM BUTTON is pushed.



2. Check if the all cables are correctly connected.



3. Restart the machine.

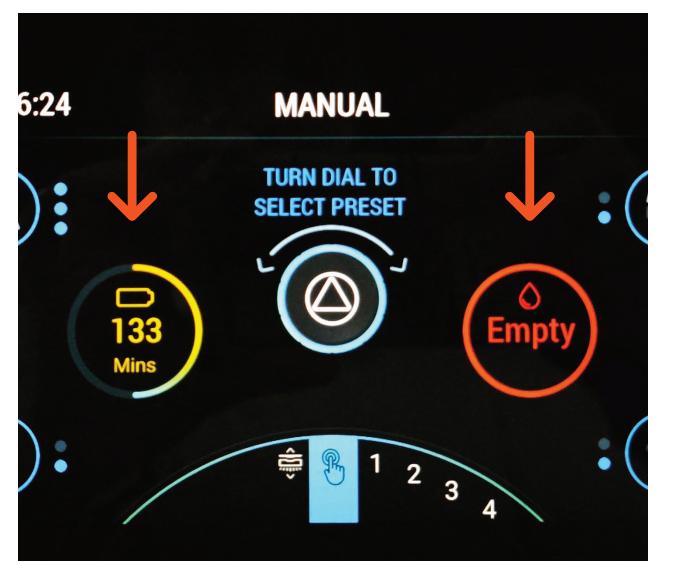

4. Check whether the remaining power and water are sufficient.

The suction doesn't work as it should?



1. Check if the suction hose is correctly installed and cleaned.



2. Open the recovery tank and check the debris tray and float are clean and working.



3. Check if squeegee blades are damaged or dirty.



4. Check the lid gasket is in good and working condition and sealing when lid is closed.

The machine doesn't clean as it should?



1. Check if you have the right detergent and water settings.



2. Check if the brake on the drive motor is lifted.



3. Check if the solution filter is cleaned and the solution valve is open.




4. Check the EcoFlex™ system is cleaned, eventually purge the system.

The brush don't work as they should?



1. To adjust machine direction turn front knob until machine is working straight.

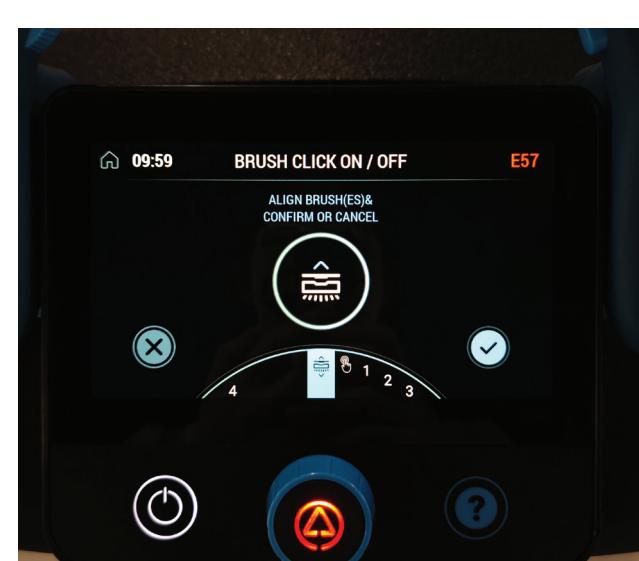

2. Check that the brush is properly installed.



3. Check if the brush are correctly installed and not worn out or if there are external materials avoiding brush rotating.